

# ASSEMBLY AND INSTRUCTION MANUAL

## MODEL OD2306 FELICITA

© 2023 KURT BEIER & KATI QUINGER



Special combination 1



Special combination 2



Base frame optionally available in 4 colours



Optional metal base frame with or without wrapped armrest



Choice of different outdoor woods



Loosely inserted seat cushion offers an individual sitting comfort



Optionally hotfrog: heatable chair cushion



Optionally functional cushion or heatable functional cushion - hotfrog (Powerbank not included in scope of delivery)

## Information on heated chair cushions and functional cushions:

**Attention! The cushions are supplied by Bullfrog without a power bank. Therefore, please observe the manufacturer's instructions for use and safety before using the power bank. It is essential that you follow the power bank manufacturer's warnings. Bullfrog is not liable for the use of the power bank.**

The pocket for the powerbank can be found on the back side of the cushion.

1. open the zip.
2. connect the powerbank to the cable of the cushion.
3. insert the powerbank into the pocket and close the zip.
4. switch on the seat or chair cushion heater with the "power-on" switch. Press and hold the switch for approx. 3 seconds. (The power bank may need to be activated first. Please read the operating instructions of the respective manufacturer). The cushion is now in operating mode at the highest level (red). The following operating levels can be set by briefly pressing the switch.

**Red:** highest level

**Blue:** medium level

**Green:** lowest level


To switch off, press and hold the switch for approx. 3 seconds. The LED turns off to indicate that the heating function is switched off.

### Instruction manual:

- Only use a Power bank with the correct specifications: Voltage: 5V. / Output 2.4A (12 Watt) minimum.
- Always use power banks with the required CE certifications. Use of different power banks or uncertified products may cause dangerous modes of operation.
- Do not punch the product with sharp items.
- Do not use the product in water. If the product has become wet/damp, allow it to dry completely before using the heating function again.

Attention! Do not use the heating function to dry the product.

- If the product is damaged or has unusual mode of operation, detach the power bank and contact your reseller.
- This product is not intended for use in medical applications or hospitals.
- The product is intended for use by adults and shall not be used by children unattended.
- The product is designed for use in an ambient temperature between 0 and 25°C.
- Do not make any modifications to the product.
- The power bank should be removed from the cushion during storage.
- Always switch off the heating function when not in use.
- CE-Directive: This product complies with the requirements of the European CE directives: 2014/30/EU and 2011/65/EU

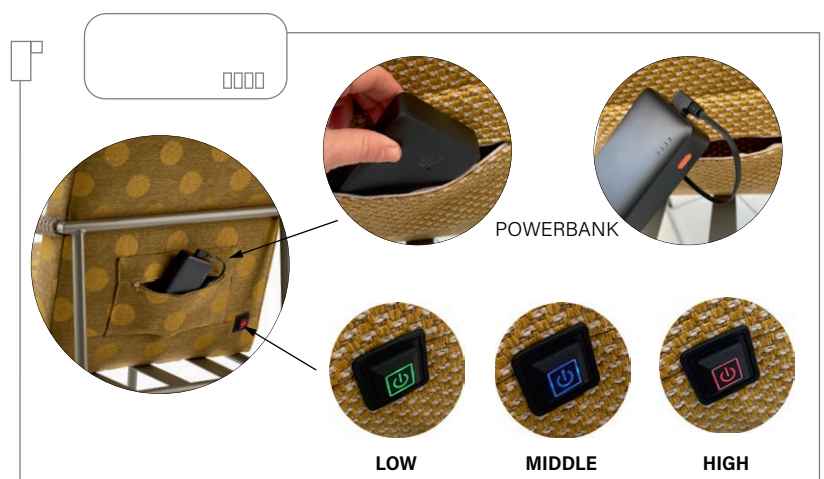

Use of protective covers with chair + seat cushion:

1. To fit the protective cover over the chair, remove the seat cushion from the chair frame and fold the back backwards.
2. Then put the seat cushion into the chair frame and pull the cover over the chair.
3. The protective cover is deliberately made shorter to allow good air circulation. The furniture should be aired from time to time.

